

HOW TO INSTALL MC80117(GY)

With hidden fixing points, this single push to close magnetic catch with plastic casing provides a sleek, simple and secure closure for cupboard and wardrobe doors. What's more, the push mechanism means that handles are not required to open doors, allowing for a stylish finish to any cupboards around the home. Catch is provided with attracting countersunk steel disc and screw, and plastic spacer. Screws for magnetic catch sold separately.

Your Catch includes;

- Magnetic catch
- Screw
- Wall plug
- Striking plate



Easy to install



Premium design



Secure hold

- 1 Step 1**
Slide away the bottom fixing plate from the catch. The fixing plate is designed with four screw holes for choice of fixing.
- 2 Step 2**
Select your desired position on the cupboard frame where you would like the catch to be installed. We advise placing this in the corner of the cupboard, either on the side or bottom of the frame where you are most likely to push open the cupboard door from (if using without handles).
- 3 Step 3**
Once you have marked your desired position on the cupboard frame, place the catch in position and screw into place (screws sold separately). The catch is designed with an adjustable tip which can be turned to extend the magnetic face to help ensure a flush door closure.
- 4 Step 4**
Once the fixing plate is installed, simply slide the catch on top. The catch is designed with an adjustable tip which can be easily turned and adjusted to ensure the door sits flush to the frame once closed.
- 5 Step 5**
Once the catch is fixed in position, line up the countersunk steel disc and screw into place.

Once installed, the magnetic push catch will allow you to easily push to open cupboard/ wardrobe doors with ease, and the secure magnetic face will allow you to securely close.

If you require any further assistance or advice on our range of magnetic catches, please call out experts on **0845 519 4701** or email sales@magnetexpert.com