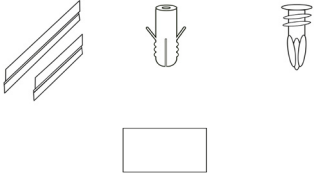
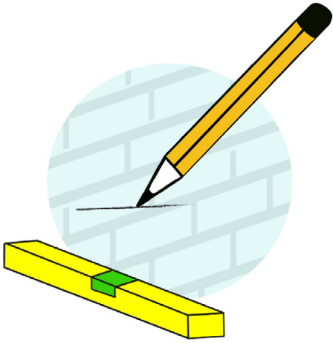
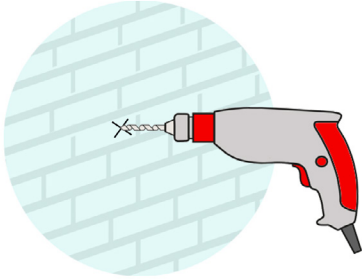
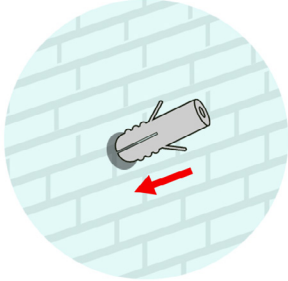
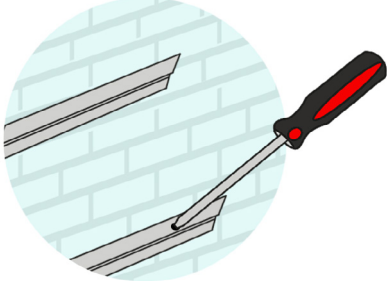
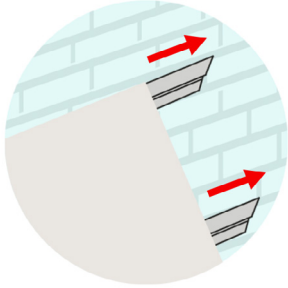



MAGNI+PLAN

BY MAGNET EXPERT

MAGNIPLAN GLASS WIPE BOARD INSTALLATION GUIDE FOR GB900600 & GB1200900

	<p>Pack includes:</p> <ul style="list-style-type: none"> 1 X Glass Wipe Board 2 X Screws 2 X Plastic expansion wall plugs 2 X Drywall anchor wall plugs- <p>Use these if your wall type is hard, such as brick or cement.</p> <p>Use these if your wall type is drywall, such as plasterboard or similar hollow wall.</p>	<p>You will require:</p> <ul style="list-style-type: none"> <input type="checkbox"/> Drill <input type="checkbox"/> Pencil <input type="checkbox"/> Spirit Level <input type="checkbox"/> Screwdriver <input type="checkbox"/> Hammer
---	---	--

<p>1</p> 	<p>2</p> 
<p>You will need to decide if you would like the board landscape or portrait. Then with a pencil mark out where you would like the first screw to go. Then using a spirit level mark out the opposing screw. This will then need to be repeated for the bottom wall mount.</p>	<p>Next use a drill to drill the holes you have marked out.</p>
<p>3</p> 	<p>4</p> 
<p>The wall plugs you use will depend on your wall you are installing the board on. We provide two types of wall plugs: plastic expansion wall plugs or drywall anchor wall plugs. Simply push them into the holes. You may require a hammer to do this.</p>	<p>Next get the wall mount you require, whether that be the landscape or portrait mounts. Then with screws, use a screwdriver to screw the wall mounts into the wall.</p>
<p>5</p> 	<p>6</p> 
<p>Then carefully line up the board hooks with the wall mount and slot the glass wipe board into place.</p>	<p>The glass wipe board will be fixed to your wall securely, ready to be drawn on or customised with magnets.</p>

If you require any further assistance or advice please call our experts on:
0845 519 4701 or email sales@magnetexpert.com