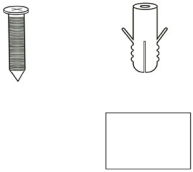
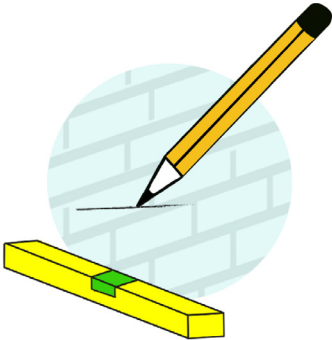
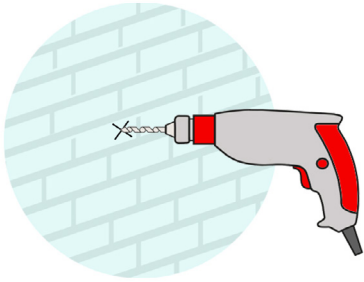
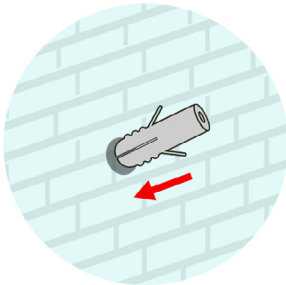
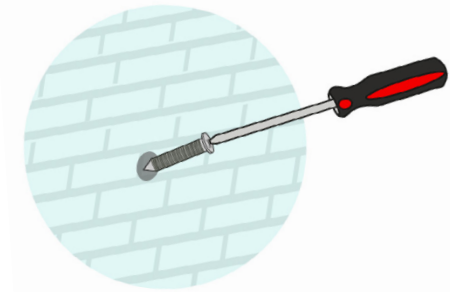
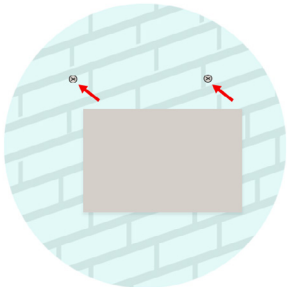



MAGNI±PLAN

BY MAGNET EXPERT

MAGNIPLAN GLASS WIPE BOARD INSTALLATION GUIDE FOR GB450450 & GB600450

	<p>Pack includes:</p> <ul style="list-style-type: none">1 X Glass Wipe Board2 X Screws2 X Plastic expansion wall plugs <p>Use these if your wall type is hard, such as brick or cement.</p> <ul style="list-style-type: none">2 X Drywall anchor wall plugs- <p>Use these if your wall type is drywall, such as plasterboard or similar hollow wall.</p>	<p>You will require:</p> <ul style="list-style-type: none"><input type="checkbox"/> Drill<input type="checkbox"/> Pencil<input type="checkbox"/> Spirit Level<input type="checkbox"/> Screwdriver<input type="checkbox"/> Hammer
---	--	--

<p>1</p> 	<p>2</p> 
<p>With a pencil mark out where you would like the first screw to go. Then using a spirit level mark out the opposing screw.</p>	<p>Next use a drill to drill the holes you have marked out.</p>
<p>3</p> 	<p>4</p> 
<p>The wall plugs you use will depend on your wall you are installing the board on. We provide two types of wall plugs: plastic expansion wall plugs or drywall anchor wall plugs. Simply push them into the holes. You may require a hammer to do this.</p>	<p>Now with the screws provide, use a screwdriver to screw them into the wall plug.</p>
<p>5</p> 	<p>6</p> 
<p>Carefully line up the board to the wall and slot the glass wipe board into place.</p>	<p>The glass wipe board will be fixed to your wall securely, ready to be drawn on or customised with magnets.</p>

If you require any further assistance or advice on our range of magnetic catches, please call out experts on **0800 488 0288** or email sales@first4magnets.com